

# PYLE®



**PMP57LIA**

**Professional Rechargeable Megaphone**

**Includes Rechargeable Battery**

**Built-in USB Flash & SD Memory Card Readers**

**USER MANUAL**

[www.PyleAudio.com](http://www.PyleAudio.com)

# PMP57LIA - Professional Rechargeable Megaphone

 
Thank you for selecting this megaphone, please read the instruction manual carefully before use to know how to operate it properly and effectively.

## 1. Package list

- 1.1 Megaphone
- 1.2 Instruction manual


## 2. Parts and Functions

- ① Speaker: Converts electrical signal into sound
- ② Signal switch: Switches the megaphone to the whistle (or siren) function. (The model without this switch does not have this function.)
- ③ Press-to-talk switch: Press this switch for announcing when carrying the megaphone on the shoulder.  
For model with B, press-to-talk switch is instead of speak button. Record and play button are used.
- ④ Handle grip: Used to hold this megaphone.
- ⑤ Latch: used to fasten the top cover with the megaphone
- ⑥ Top cover. Holds the battery compartment
- ⑦ Microphone: Converts sound into electrical signal.
- ⑧ Volume controller. Used to adjust the output volume. To increase volume, turn direct clockwise.
- ⑨ Battery compartment: Holds 8 pcs size C (size D) batteries.
- ⑩ Mic fixing hanger: Hangs the microphone.
- ⑪ Carry strap: Conveniently carries the microphone

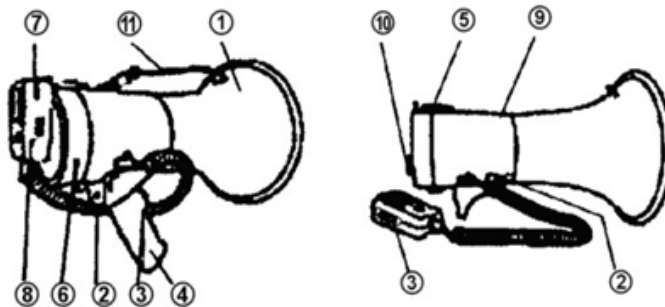


### 3. Operational Instructions:

 3.1 Installing the batteries: Open up the latch and top cover. Remove the two battery tubes. Put 4 pcs size C (size D) batteries properly (+/- terminals must match) into each tube. Insert the tubes into the battery compartment, and close the top cover and the latch.

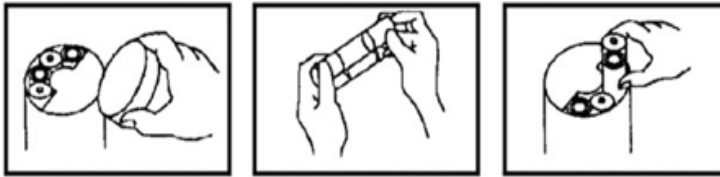

3.2 When carrying the microphone on the shoulder, press the press-to-talk power switch on the left side of the microphone. Position the speaker opening mouth towards the object, and speak through the microphone mouthpiece. Bring the microphone mouthpiece close to your lips and speak normally.

 3.3 Turn the sound volume control on the right side of the microphone and adjust the volume level to optimum without causing howling. Please note that the closer the sound source is to the microphone the better the amplification is.

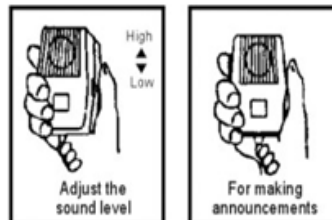

(Adjust the sound level)

3.4 If the megaphone is a model equipped with the siren function. Switch the signal switch to the siren position: the speaker will generate a continuous siren. While switch to the talk position, the siren will stop.

3.5 If the megaphone is a model equipped with the whistle function. Switch the signal switch to the whistle position, and press the power switch, the speaker will generate a continuous whistle. While switch to the talk position, the siren will stop.

3.6 If the megaphone is activated and the volume

of the speaker is weak, the batteries may be out of the power, Follow the step 3.1 to replace the batteries.

4. Basic Troubleshooting:

4.1 If the megaphone does not work, remove the batteries to check if the +/- terminals match correctly.

4.2 If the terminal match correctly, place back the batteries and press them down into the battery compartment firmly, make sure the batteries are in contact properly.

5. Specifications:

Rated output power: 18W(8W speaker, THD=10%)

Max output power: 25W

Power consumption: 25W(at rated output)

Power source:  1.5V x 8pcs(Size C)Battery

1.5V x 8pcs(Size D)Battery

OUTPUT Current: 0.9A

Effective distance: Approx.600 meters

Power Duration: Approx.6 Hours

Microphone:  Uni-directional dynamic microphone

Condenser microphone

Dimension: HORN Ø 240mm x L355mm

Weight: 1.45kg(without batteries)

6. Precautions:

6.1 Do not place under the direct sunlight or the high temperature environment for a long period of time

6.2 Avoid exposure to rain, water or heavy humidity.

6.3 When cleaning the megaphone body only use a neutral detergent. Never use thinner or benzene.

6.4 Amplified sound or howling may cause damage to person's ears. Don't use the megaphone close to people's ears/

6.5 If not in use for a long period of time, remove the batteries and store them separately to prevent leaking batteries and damaging the circuits inside the megaphone.

6.6 When the megaphone is not in use, put the signal switch ② in the "talk" position, and the Press-to-talk switch ③ in a natural position in order to extend the use of the batteries. This is the battery power saving procedure that will mak the battery work longer for your magaphone.

# **PMP57LIA - Professional Rechargeable Megaphone**

## **SPECIFICATIONS:**

- Used by U.S. Armed Forces
- For Indoor/Outdoor Use
- Maximum Power Output: 50 Watt
- 10 Seconds Integrated Audio Memory
- Built-in SD & USB Flash Memory Card Readers
- Ergonomic Pistol Grip and Light-Weight Chassis
- Rechargeable Lithium Battery (Charger Included)
- Battery Powered by 8 x "C" Type Batteries, Not Included
- 6 Audio Functions Including Talk, Siren & USB/SD Modes
- Comes with Lithium Rechargeable Battery - Lasts up to 16 Hours
- Plug in MP3 Players or External Devices to the 3.5mm Aux-In Jack
- Dimensions: Diameter 9.44" x Length 13.77"
- 1,200 Yard Range
- Weight: 3.5 Lbs.